



## DIRECTIONS:

This kit includes our original Tread Doctor Knobby Cutting Tool and Sniper Kit for Custom Tire grooving.

The Sniper Kit is a #3 cutting head and 12 replacement blades that fit your Tread Doctor Knobby Tool.

Use your Tread Doctor to sharpen your knobbies


Use the Sniper Kit when you want to cut your own custom grooves and patterns in your tires.




Scan this QR code with your smart phone to see video of Sniper Head cutting.

## INSTALLATION:


Step 1. With Tread Doctor cool use Phillips Head #2 screwdriver to remove Tread Doctor cutting blade by loosening set screw.

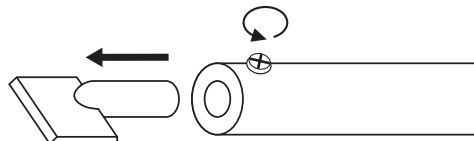


Step 2. Install cutting blade onto Cutting head. Loosen square nuts to slip blade in-between. Make sure blade is back against head.

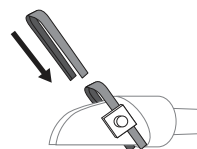



Step 3. Install Sniper Cutting Head. Tighten set screw to hold cutting head into place.

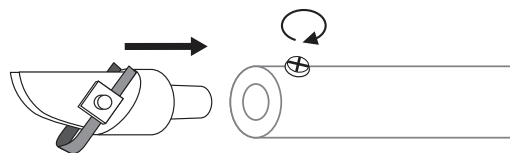

Step 4. Place Tread Doctor Sniper on stand and turn on. Let unit warm up for 10 minutes

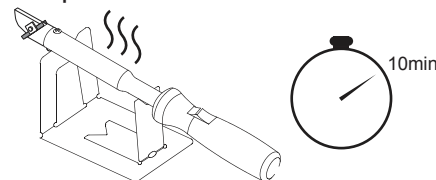

Step 5. With unit completely warmed up place front tip of cutting head on tire and push forward. Try to keep the brass part of the tip on the tire at all times. This preheats the surface before it is cut with the the hot blade. see illustration 3.

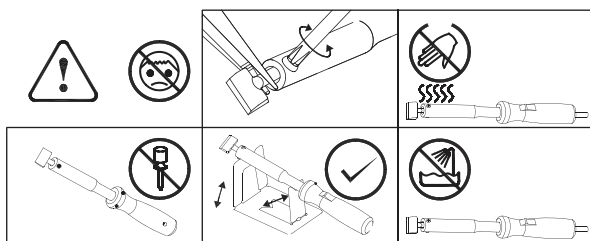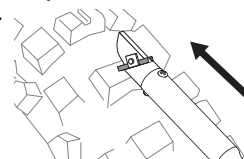

Do you have a great product idea?  
We can help bring your product to market.  
Call or e-mail Hardline Products for details.



677 Cochran Street Simi Valley, CA 93065  
805-581-4700 ph. 805-581-0022 fax.  
sales@hardlineproducts.com  
www.hardlineproducts.com